




| WEIGHT (KG)                     |      |
|---------------------------------|------|
| TRANSFORMER ASSEMBLY DRY WEIGHT | 3910 |
| OIL                             | 1390 |
| TOTAL WEIGHT                    | 5300 |
| TANK&FITTINGS                   | 1170 |

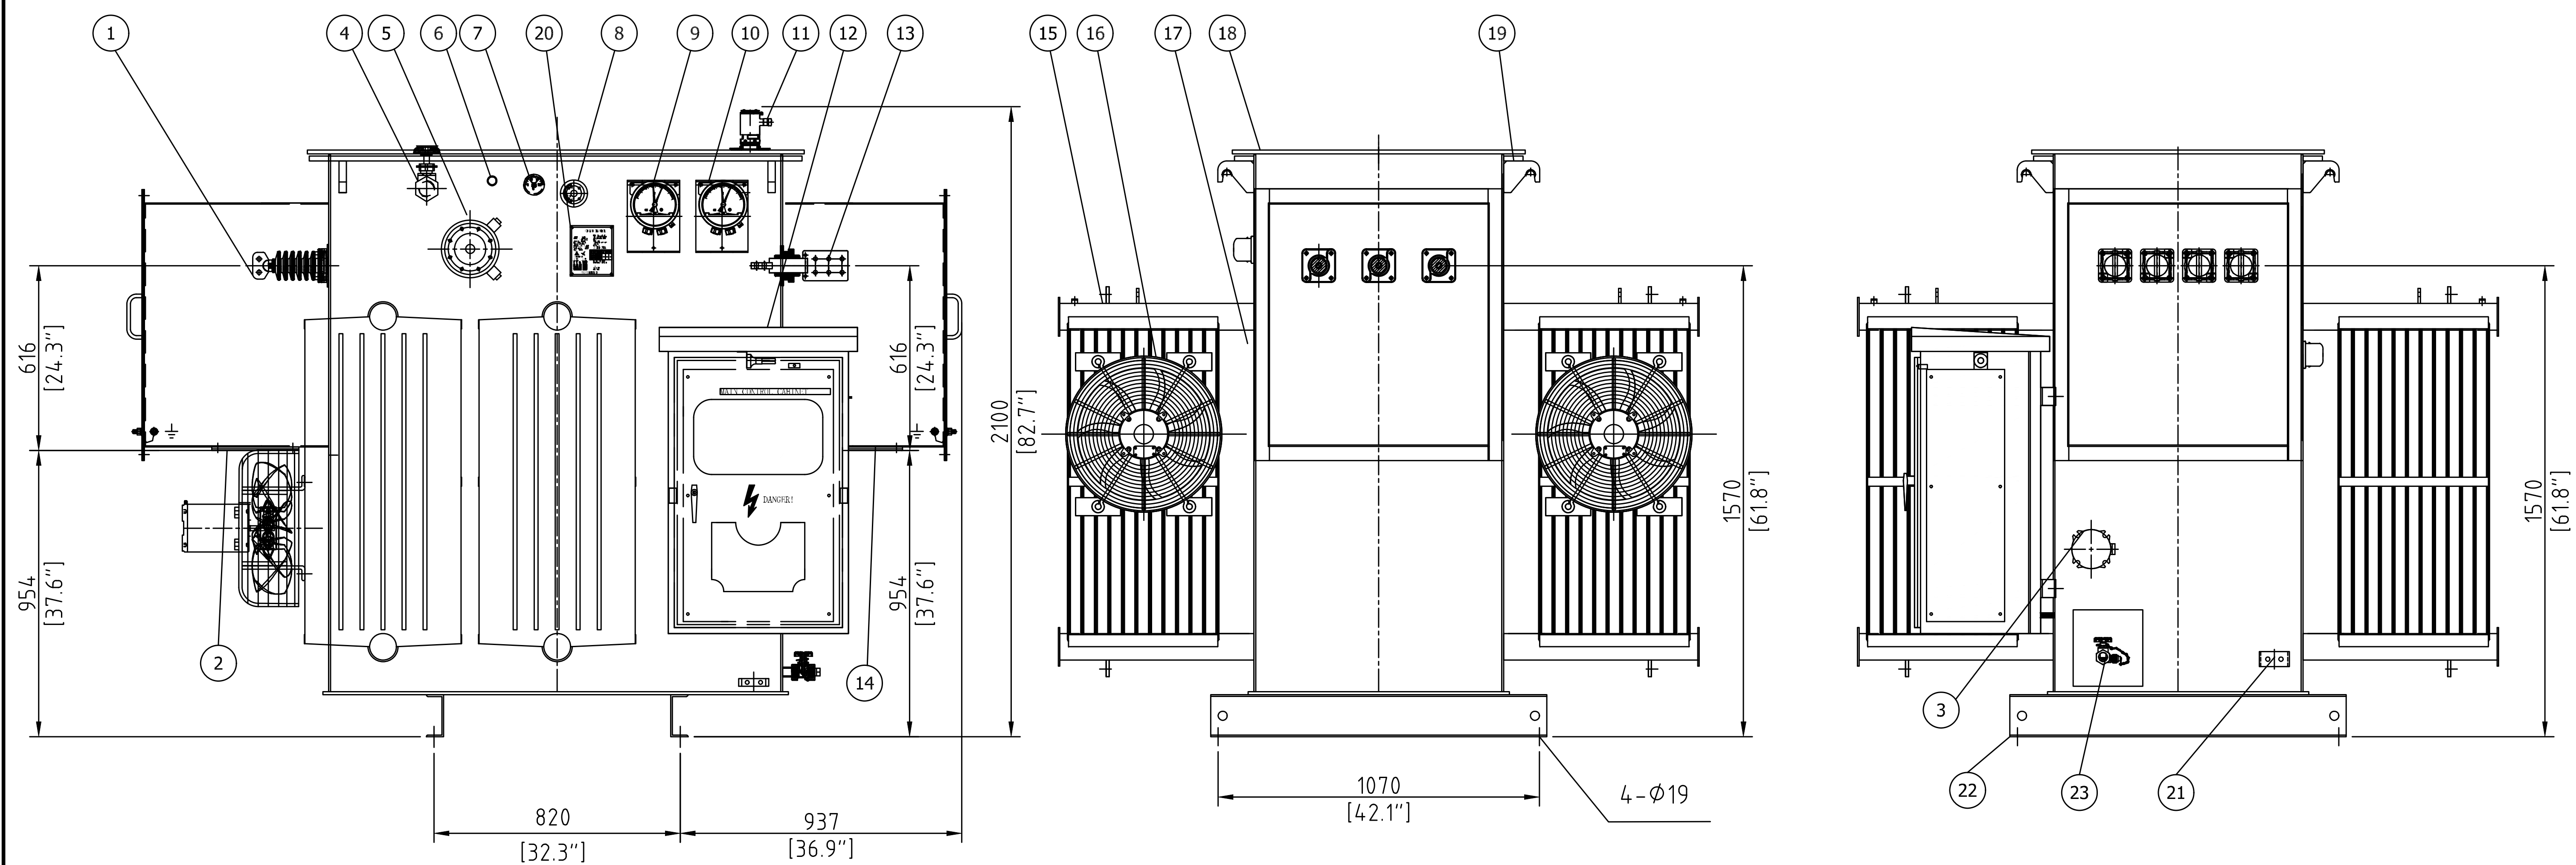

| TECHNICAL DATA             |                  |
|----------------------------|------------------|
| RATING                     | 2000/2660kVA     |
| PHASE                      | 3                |
| PRIMARY VOLTAGE            | 14400V           |
| HIGH VOLTAGE TAP RANGE     | ±2×2.5           |
| SECONDARY VOLTAGE          | 600Grdy/347V     |
| FREQUENCY                  | 60Hz             |
| VECTOR GROUP               | Dyn1             |
| WINDING MATERIAL           | COPPER           |
| LOAD LOSS AT RATED VOLTAGE | 15000W (0NAN)    |
| NO LOAD LOSSES             | 2300W            |
| IMPEDANCE(0NAN)            | 6.25%            |
| COOLING METHOD             | 0NAN/0NAF        |
| ALTITUDE                   | ≤1000m           |
| COLOR                      | ANSI 70 Sky Grey |

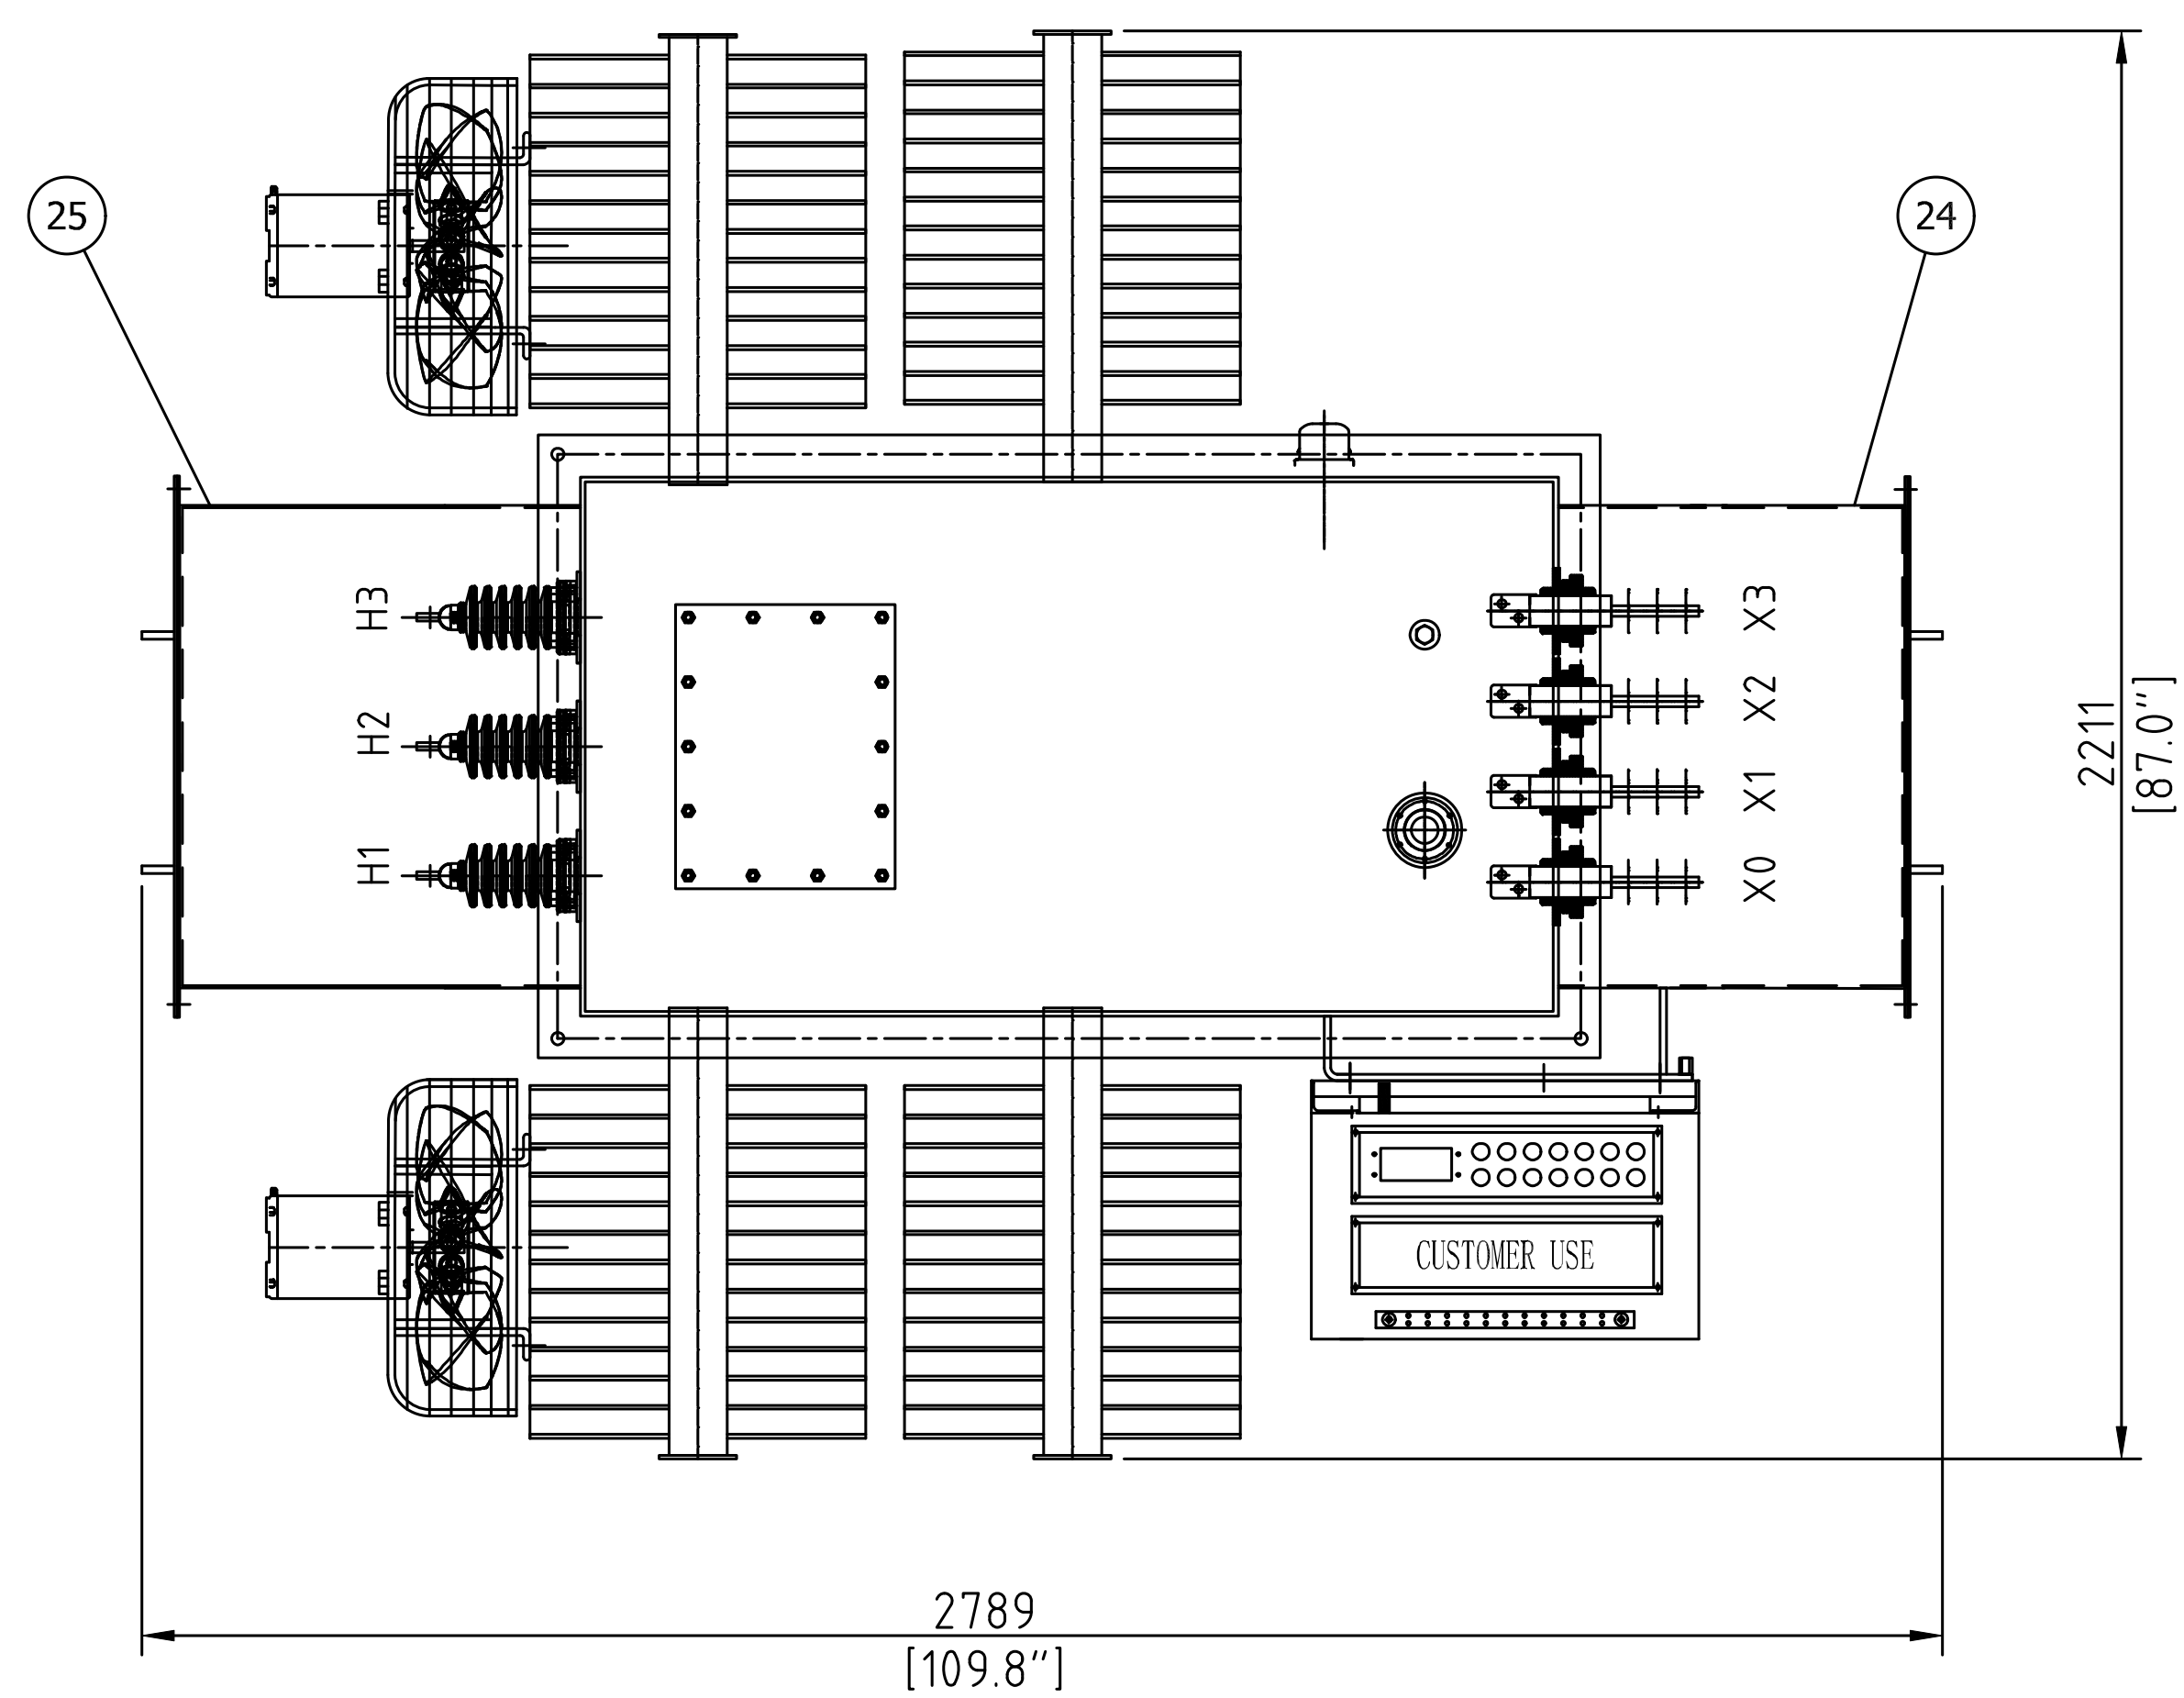


L.V terminal (x0,x1,x2,x3)

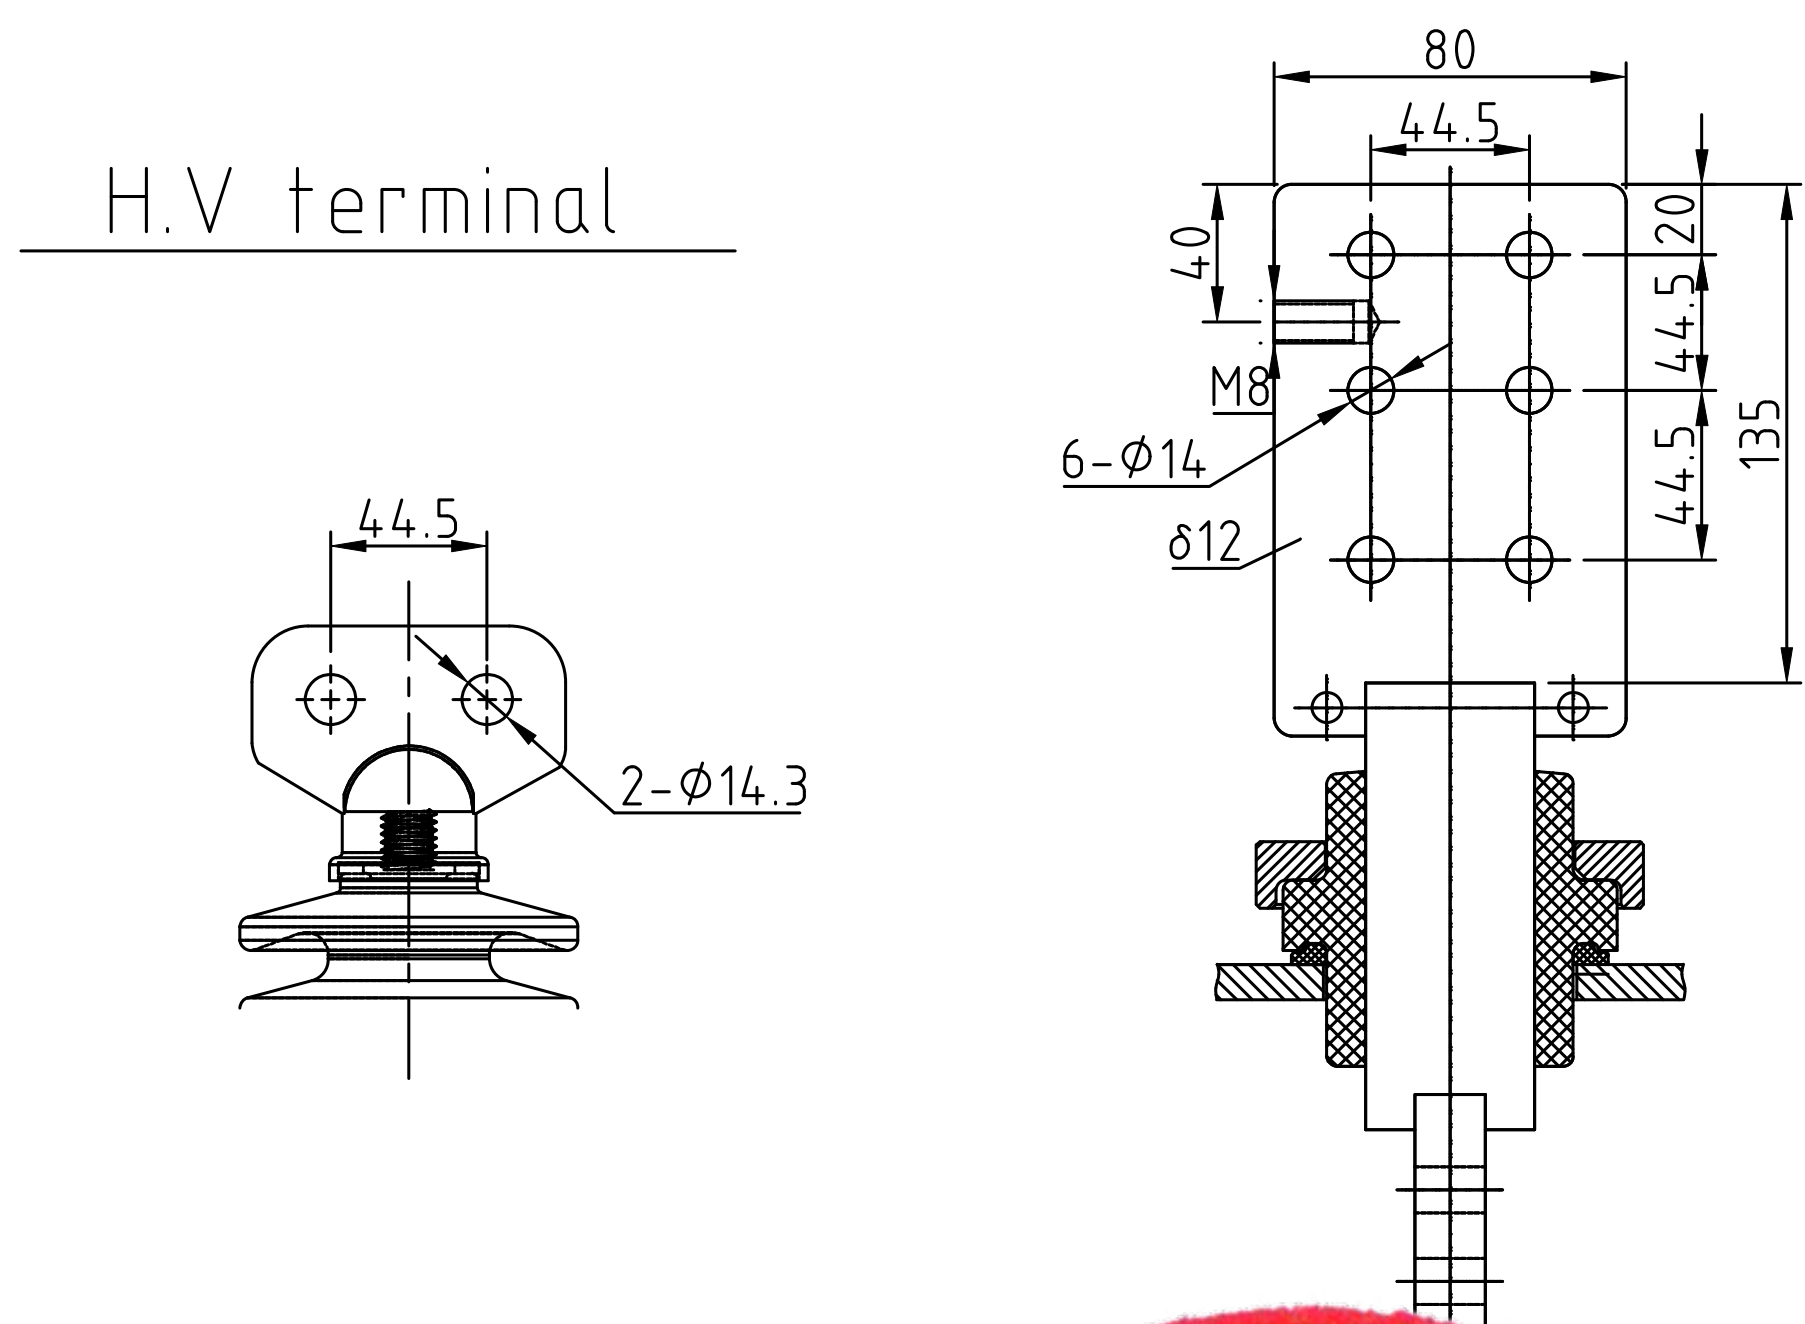


## H.V terminal


H.V wiring  
schematic diagram

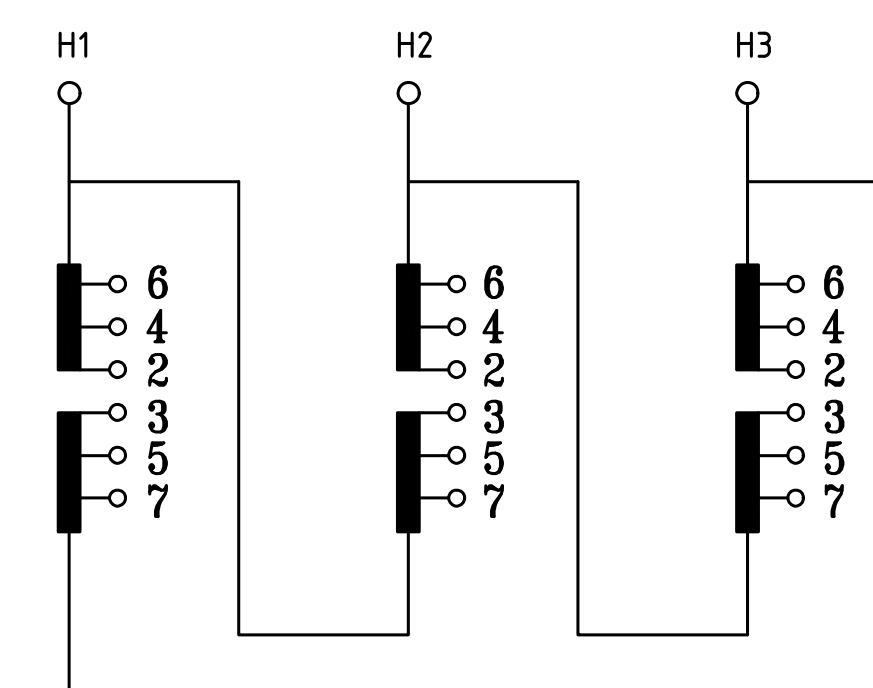

L.V wiring  
schematic diagram

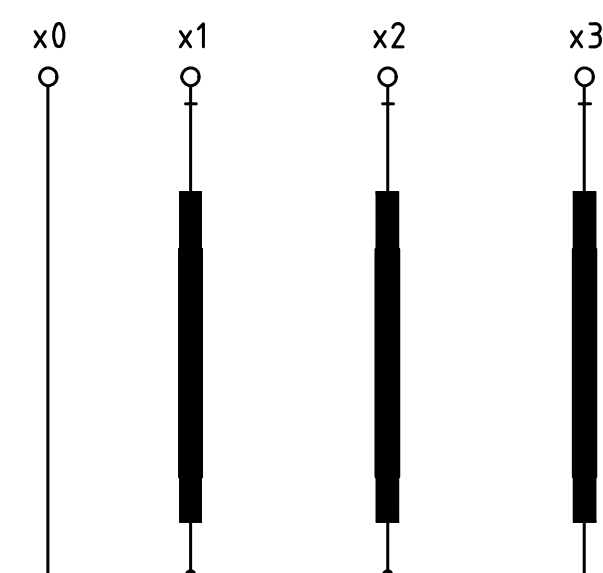

| ITEM | FITTINGS AND DESCRIPTIONS                   | QTY |
|------|---------------------------------------------|-----|
| 1    | HV BUSHING (15KV 208A)                      | 3   |
| 2    | FLANGE,H,V                                  | 1   |
| 3    | QUICK-ACTING OIL PRESSURE RELAY SYJ9-50-25  | 1   |
| 4    | OIL FILL VALVE                              | 1   |
| 5    | TERMINAL BOX                                | 1   |
| 6    | VENT VALVE                                  | 1   |
| 7    | VACUUM PRESSURE GAUGE SID-ZKB-072-0         | 1   |
| 8    | LIQUID LEVEL INDICATOR YZF-90TH             | 1   |
| 9    | LIQUID TEMPERATURE INDICATOR BWY-803A       | 1   |
| 10   | WINDING TEMPERATURE INDICATOR BWR-04AAW     | 1   |
| 11   | PRESSURE RELIEF DEVICE YSF9-35/50KJ         | 1   |
| 12   | AIR COOLING CONTROL BOX                     | 1   |
| 13   | LV BUSHING (1.0KV 3150A)                    | 4   |
| 14   | FLANGE,L,V                                  | 1   |
| 15   | RADIATORS(PG1100-12/520)                    | 4   |
| 16   | FANS                                        | 2   |
| 17   | TAP CHANGER,125/20-6×5                      | 1   |
| 18   | TANK AND COVER ASSEMBLY                     | 1   |
| 19   | LIFTING EYE FOR ACTIVE PART WITH TANK COVER | 4   |
| 20   | NAME PLATE,                                 | 1   |
| 21   | GROUND PAD ON TANK WALL                     | 2   |
| 22   | BASE WELDED TO TANK                         | 1   |
| 23   | DRAIN VALVE WITH SAMPLING DEVICE            | 1   |
| 24   | LOW VOLTAGE CABLE BOX                       | 1   |
| 25   | HIGH VOLTAGE CABLE BOX                      | 1   |
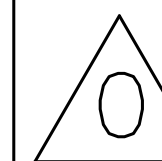
|                                                                                       |         |         |  |          |                               |                        |         |                                                                                       |
|---------------------------------------------------------------------------------------|---------|---------|--|----------|-------------------------------|------------------------|---------|---------------------------------------------------------------------------------------|
| TYPE<br>SF-2000(2660)/14.4/0.6                                                        |         |         |  |          | DWG. NAME<br>general assembly |                        |         |                                                                                       |
| DRAWN                                                                                 | CHECKED | CHECKED |  | APPROVED | FIRST ANGLE<br>PROJECTION     | SCALE                  | 1<br>30 | 2023/11/14                                                                            |
| Mike W.                                                                               | Iris J. | Ella W  |  | Sam S.   | REF.<br>DWG.<br>NO.           |                        |         | REV.<br>NO.                                                                           |
|  |         |         |  |          | DWG.<br>NO.                   | SF2000(2660)–231124–02 |         |  |

CHANGE






# SUBSTATION TRANSFORMER


STANDARDS CSA C88  
2000/2660kVA HV 14400V DELTA  
LV 600V Grdy/347  
TYPE OF COOLING ONAN/ONAF  
PERCENT IMPEDANCE: 6.25 %  
TYPE OF COIL 45# NO PCB  
CORE & COIL (NO TANK) : 5730 LBS  
TANK & FITTINGS: 2580 LBS  
LIQUID: 410 GALS 3060 LBS  
TOTAL: 11640 LBS

PRODUCT NO. :  
TYPE SF-2000/2660/14.44/0.6  
CONDUCTOR MATERIAL: COPPER  
PHASE 3  
FREQUENCY 60Hz  
TEMPERATURE RISE 65° C/ 65° C  
SERIAL NO. :  
DATE OF MFG. :  
H. V. Um/BIL/AC 15/95/34 kV  
L. V. Um/BIL/AC 1.2/30/10 kV

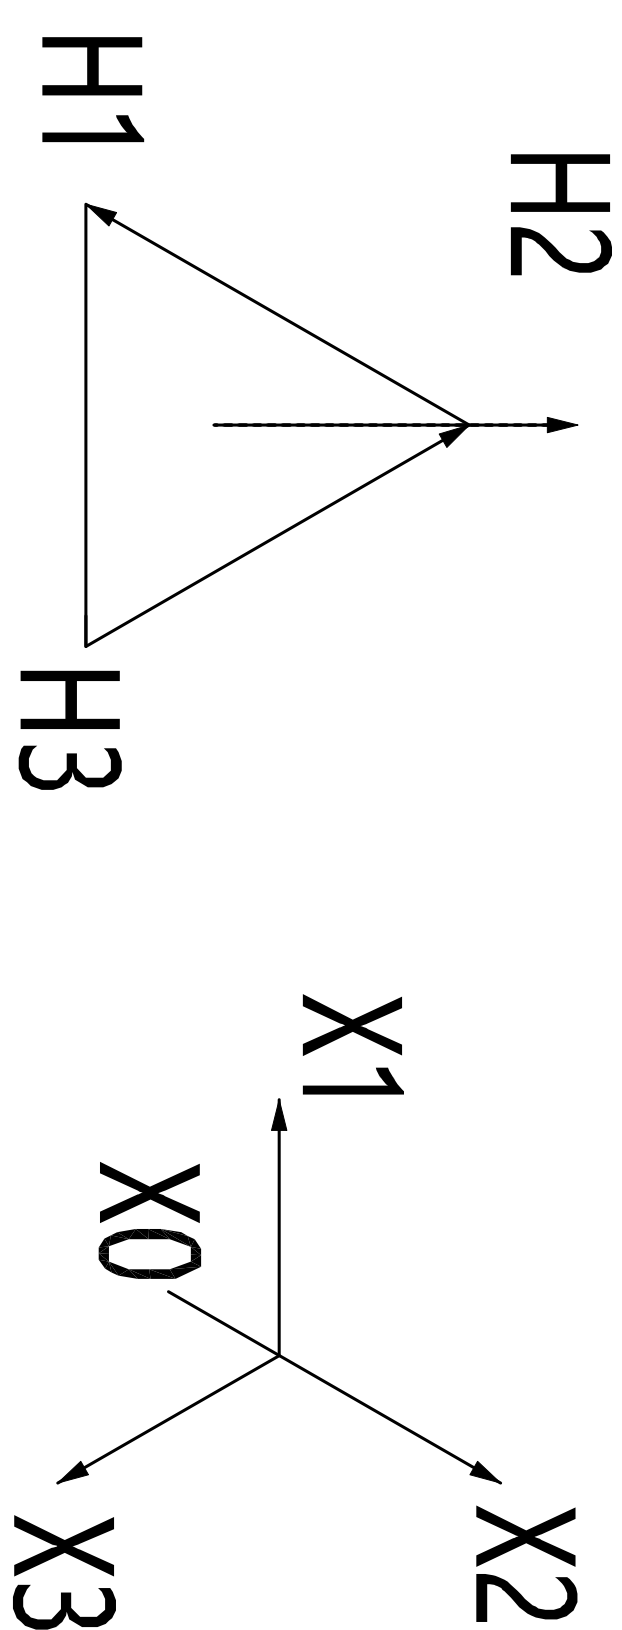

VECTOR GRAPH (Dyn1)

H. V WIRING L. V WIRING

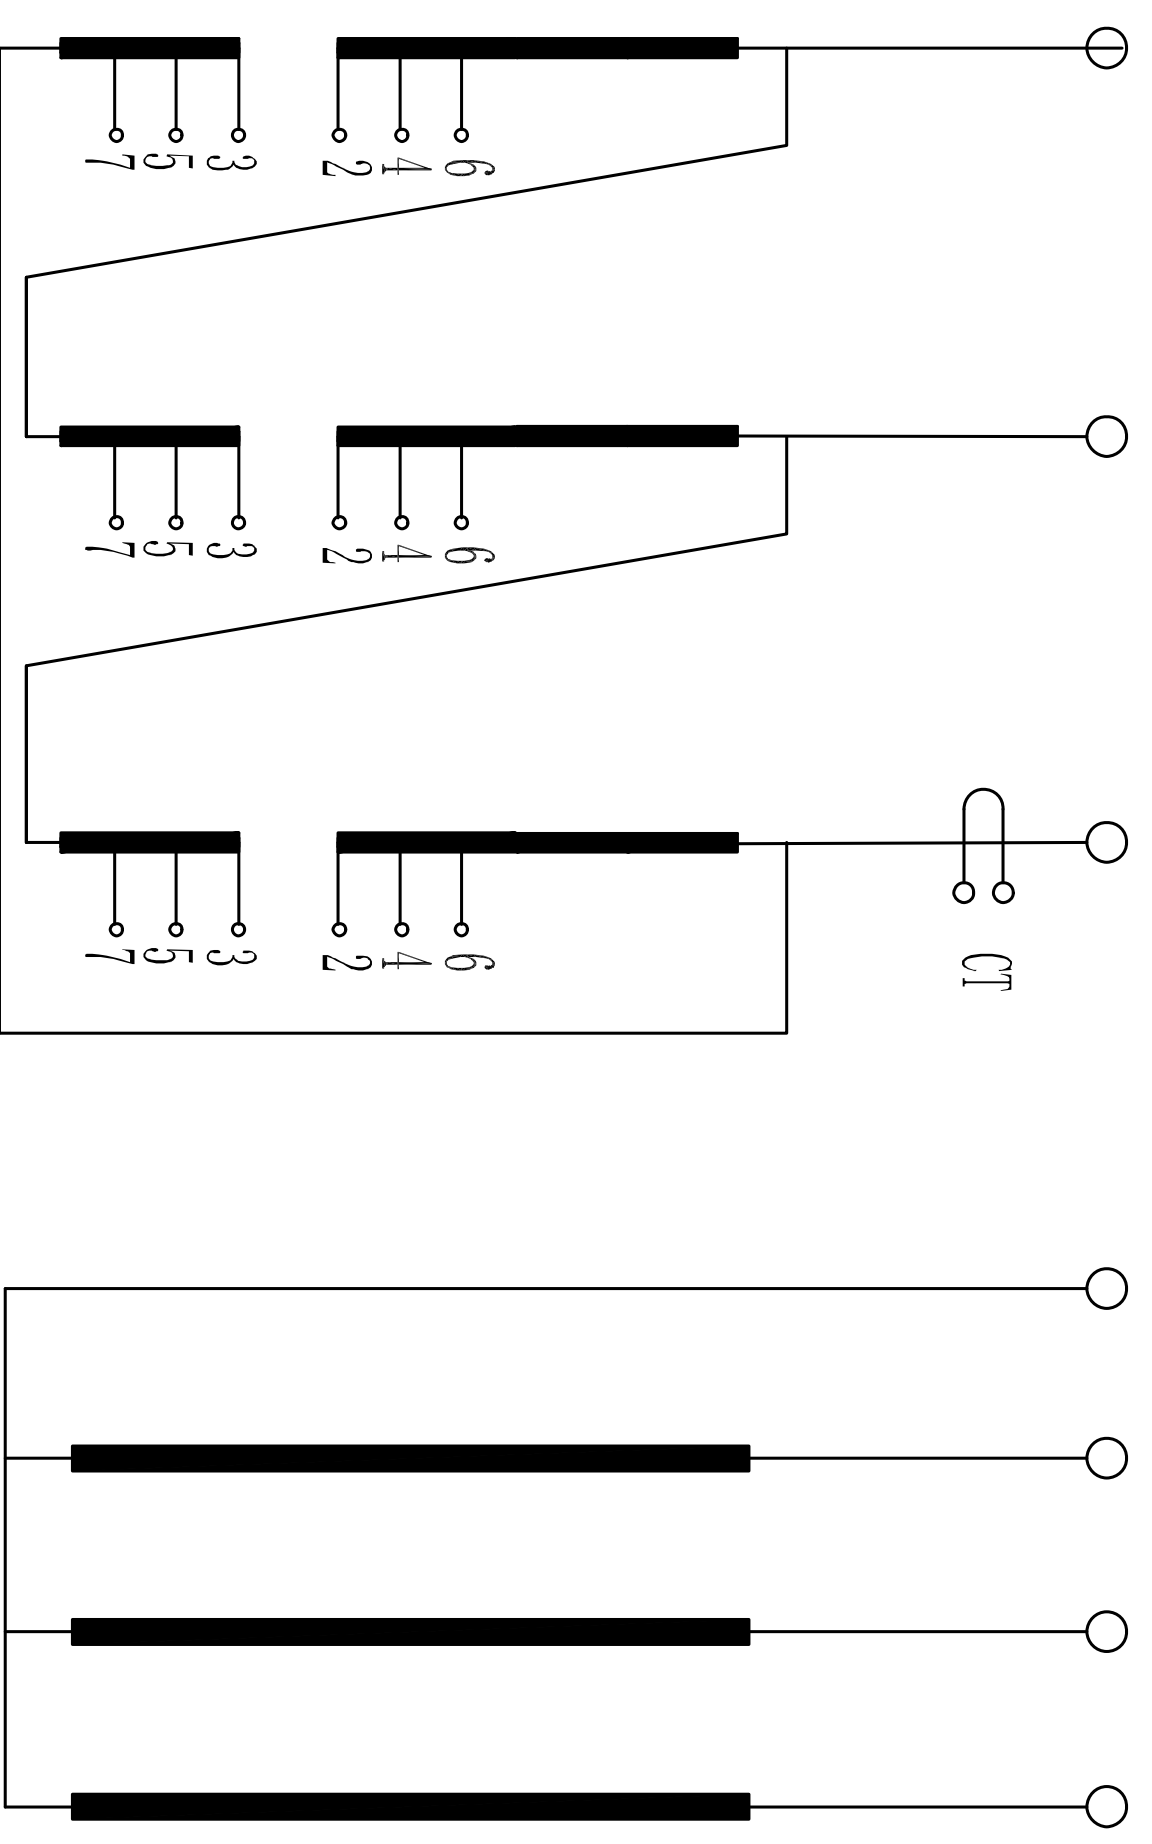

SCHEMATIC DIAGRAM SCHEMATIC DIAGRAM




| Tapping<br>Range | H. V        |             |        | L. V        |             |        |
|------------------|-------------|-------------|--------|-------------|-------------|--------|
|                  | Voltage (V) | Current (A) |        | Voltage (V) | Current (A) |        |
|                  |             | ONAN        | ONAF   |             | ONAN        | ONAF   |
| 1 2-3            | 15120       | 76.37       | 99.28  | 600         | 1924.5      | 2501.9 |
| 2 3-4            | 14760       | 78.23       | 101.70 |             |             |        |
| 3 4-5            | 14400       | 80.19       | 104.24 |             |             |        |
| 4 5-6            | 14040       | 82.24       | 106.92 |             |             |        |
| 5 6-7            | 13680       | 84.41       | 109.73 |             |             |        |

DE-ENERGIZE TRANSFORMER  
BEFORE OPERATING TAPCHANGER

ITEM:  
MANUFACTURER:  
PART NUMBER:

WWW.JIEZOUPOWER.COM



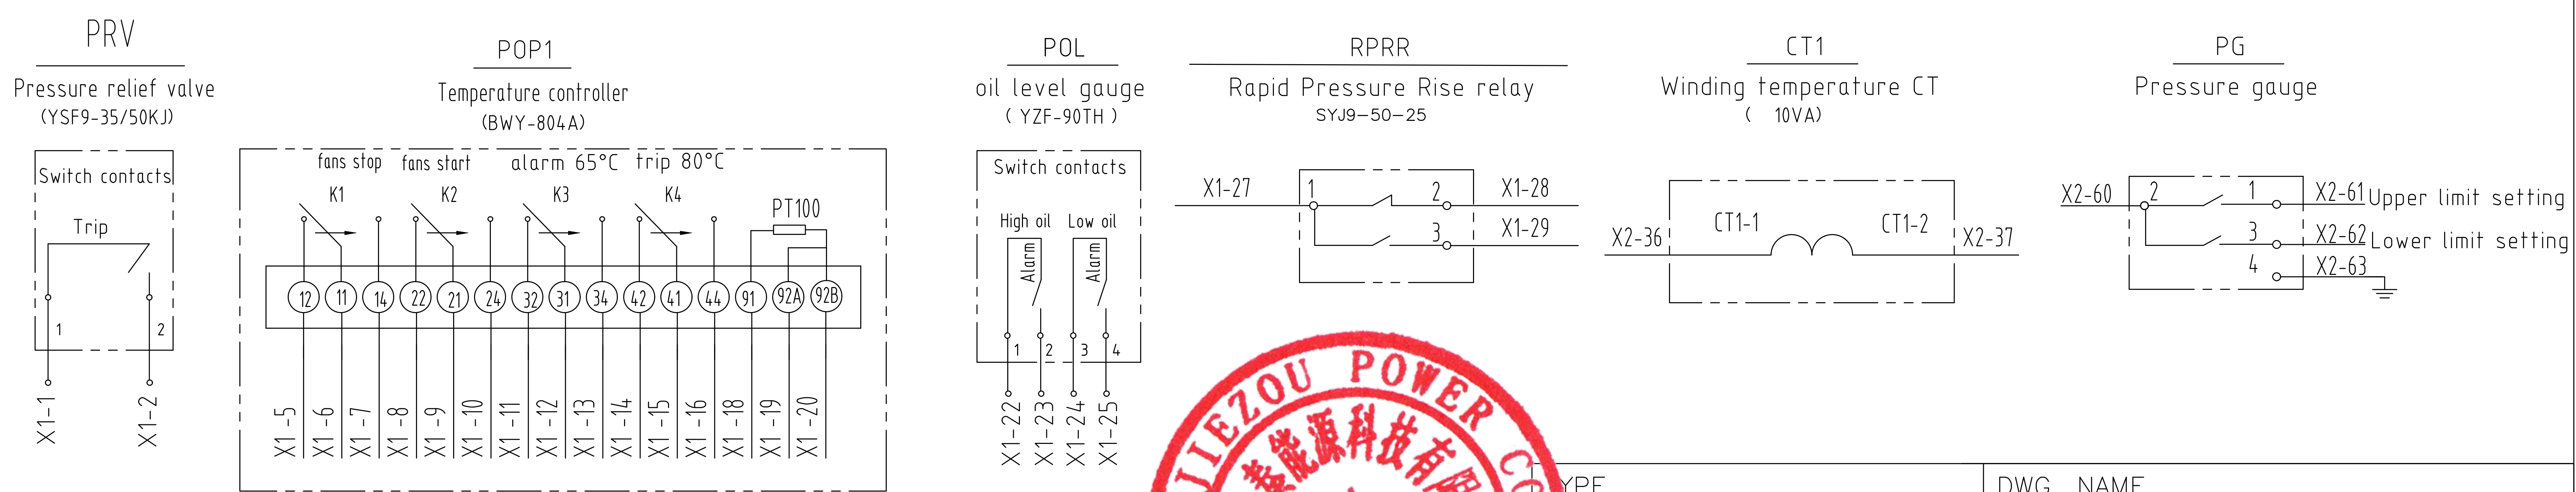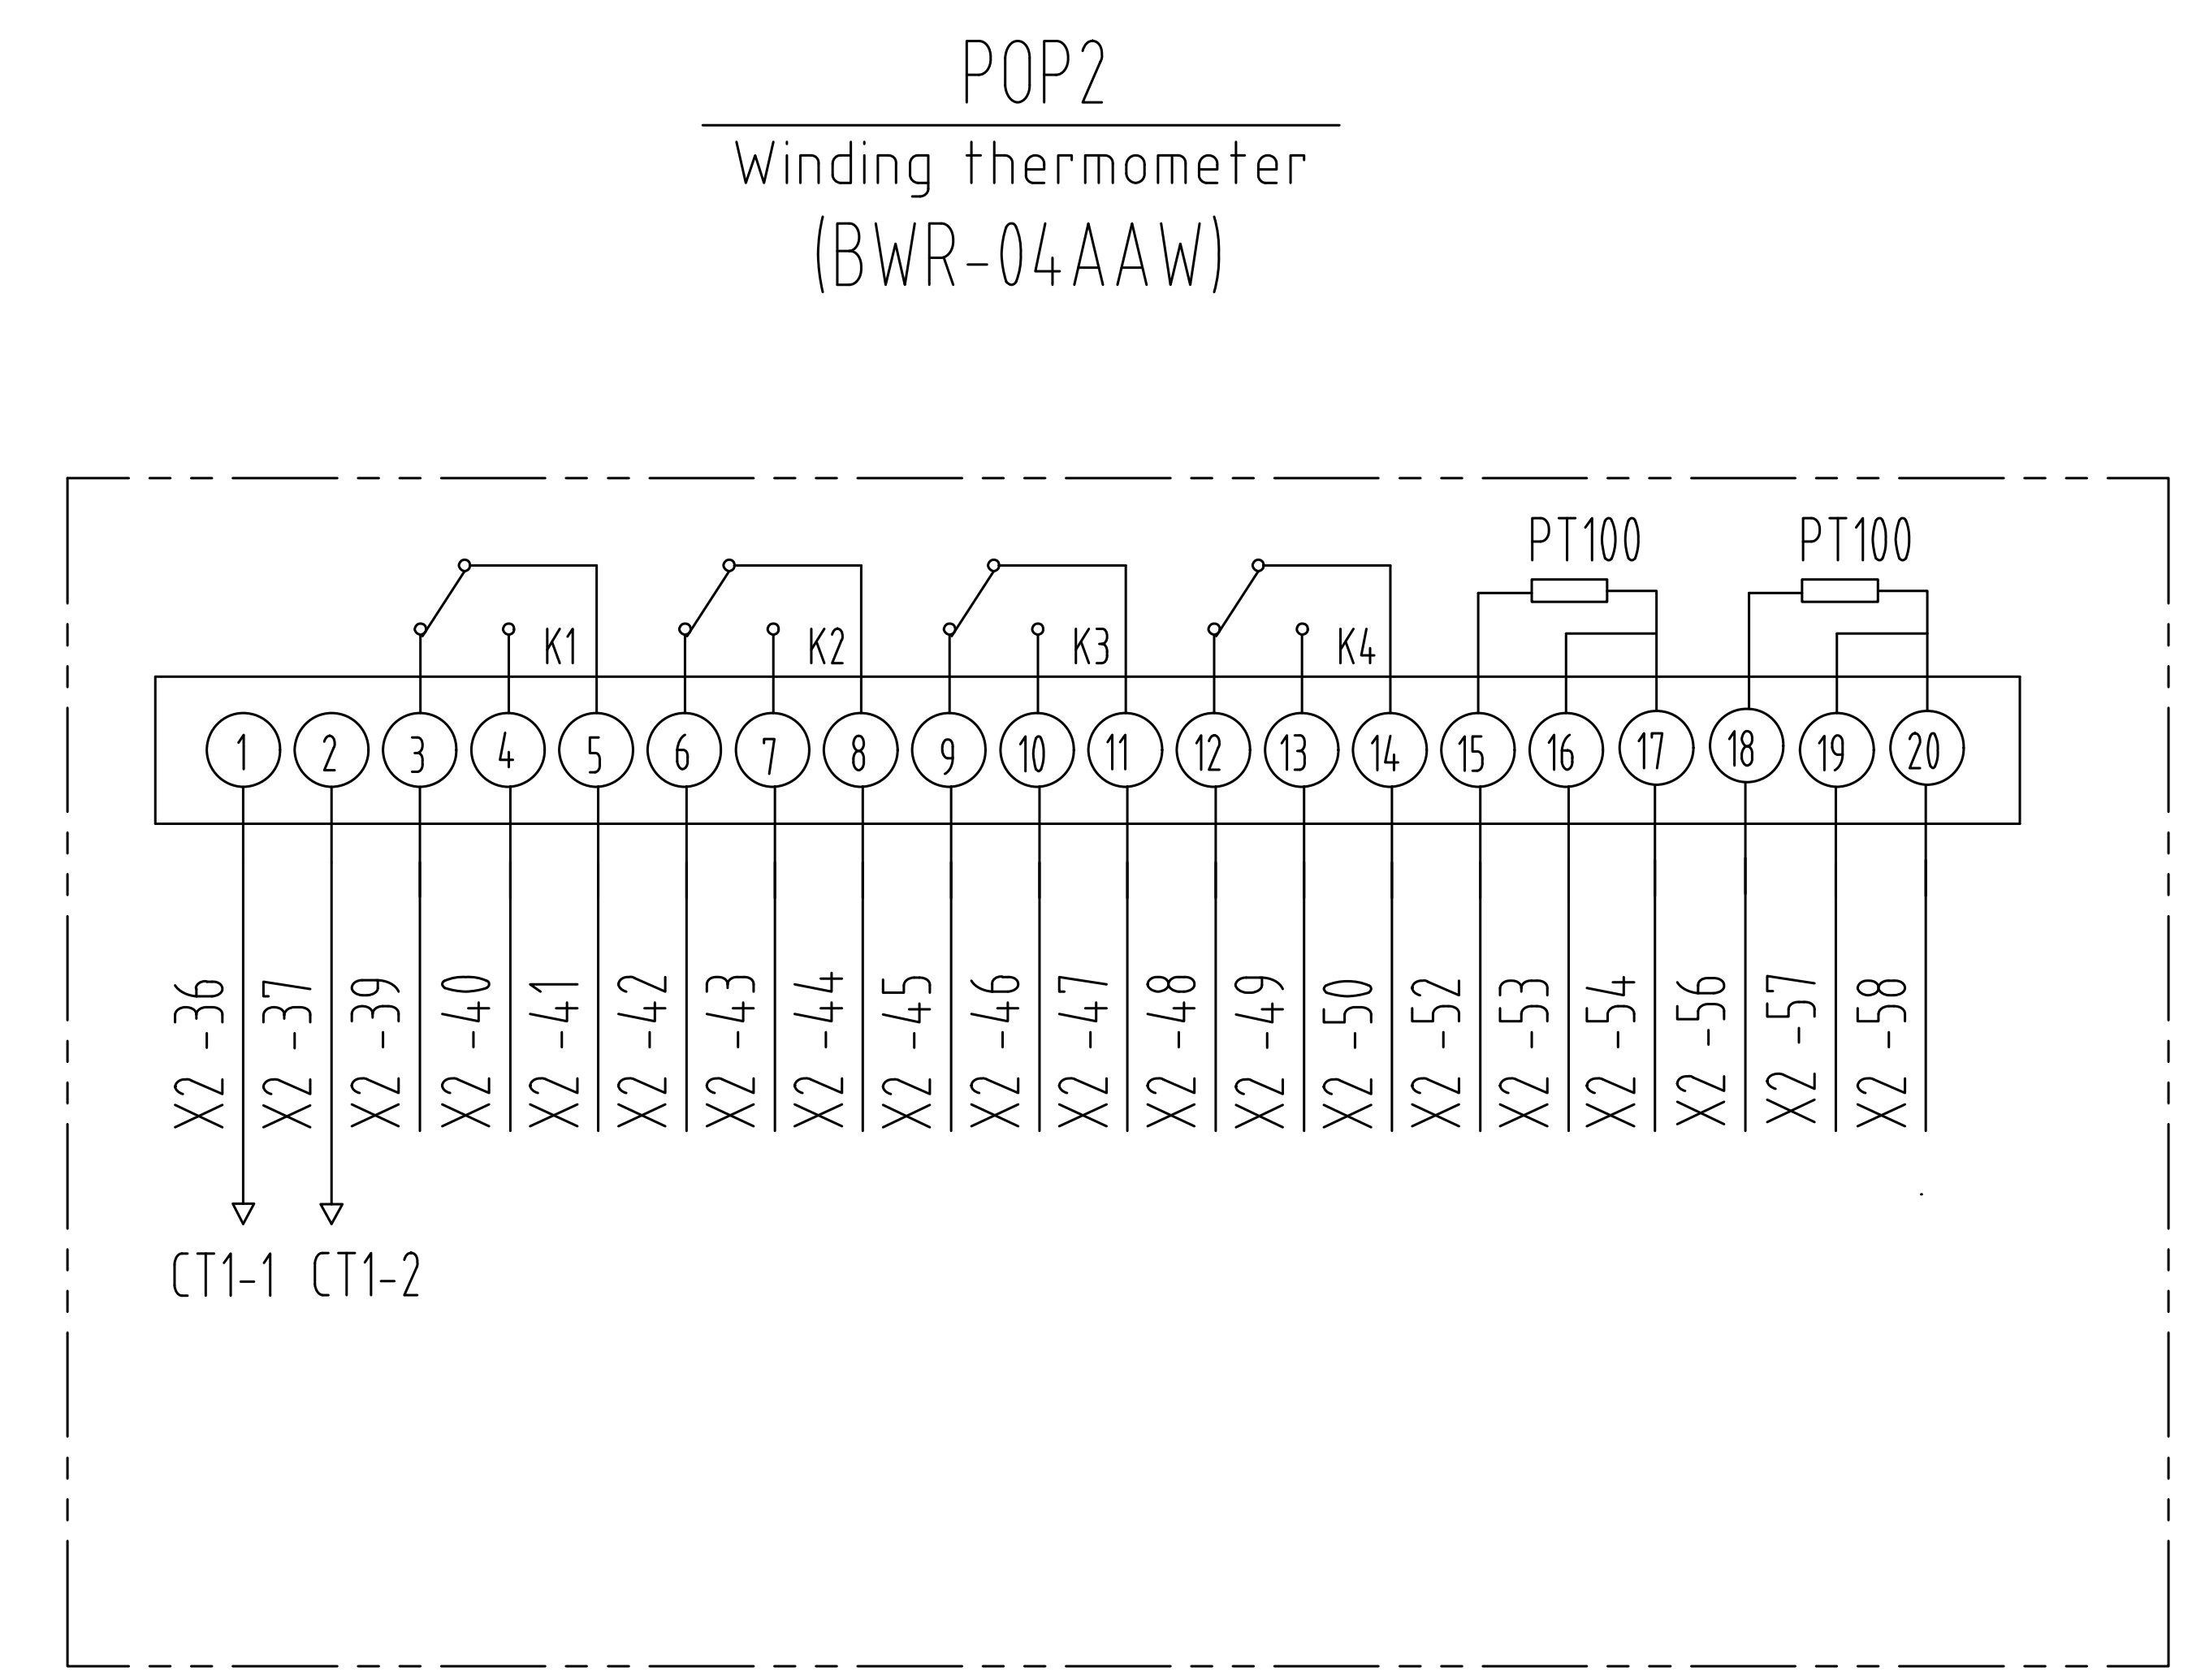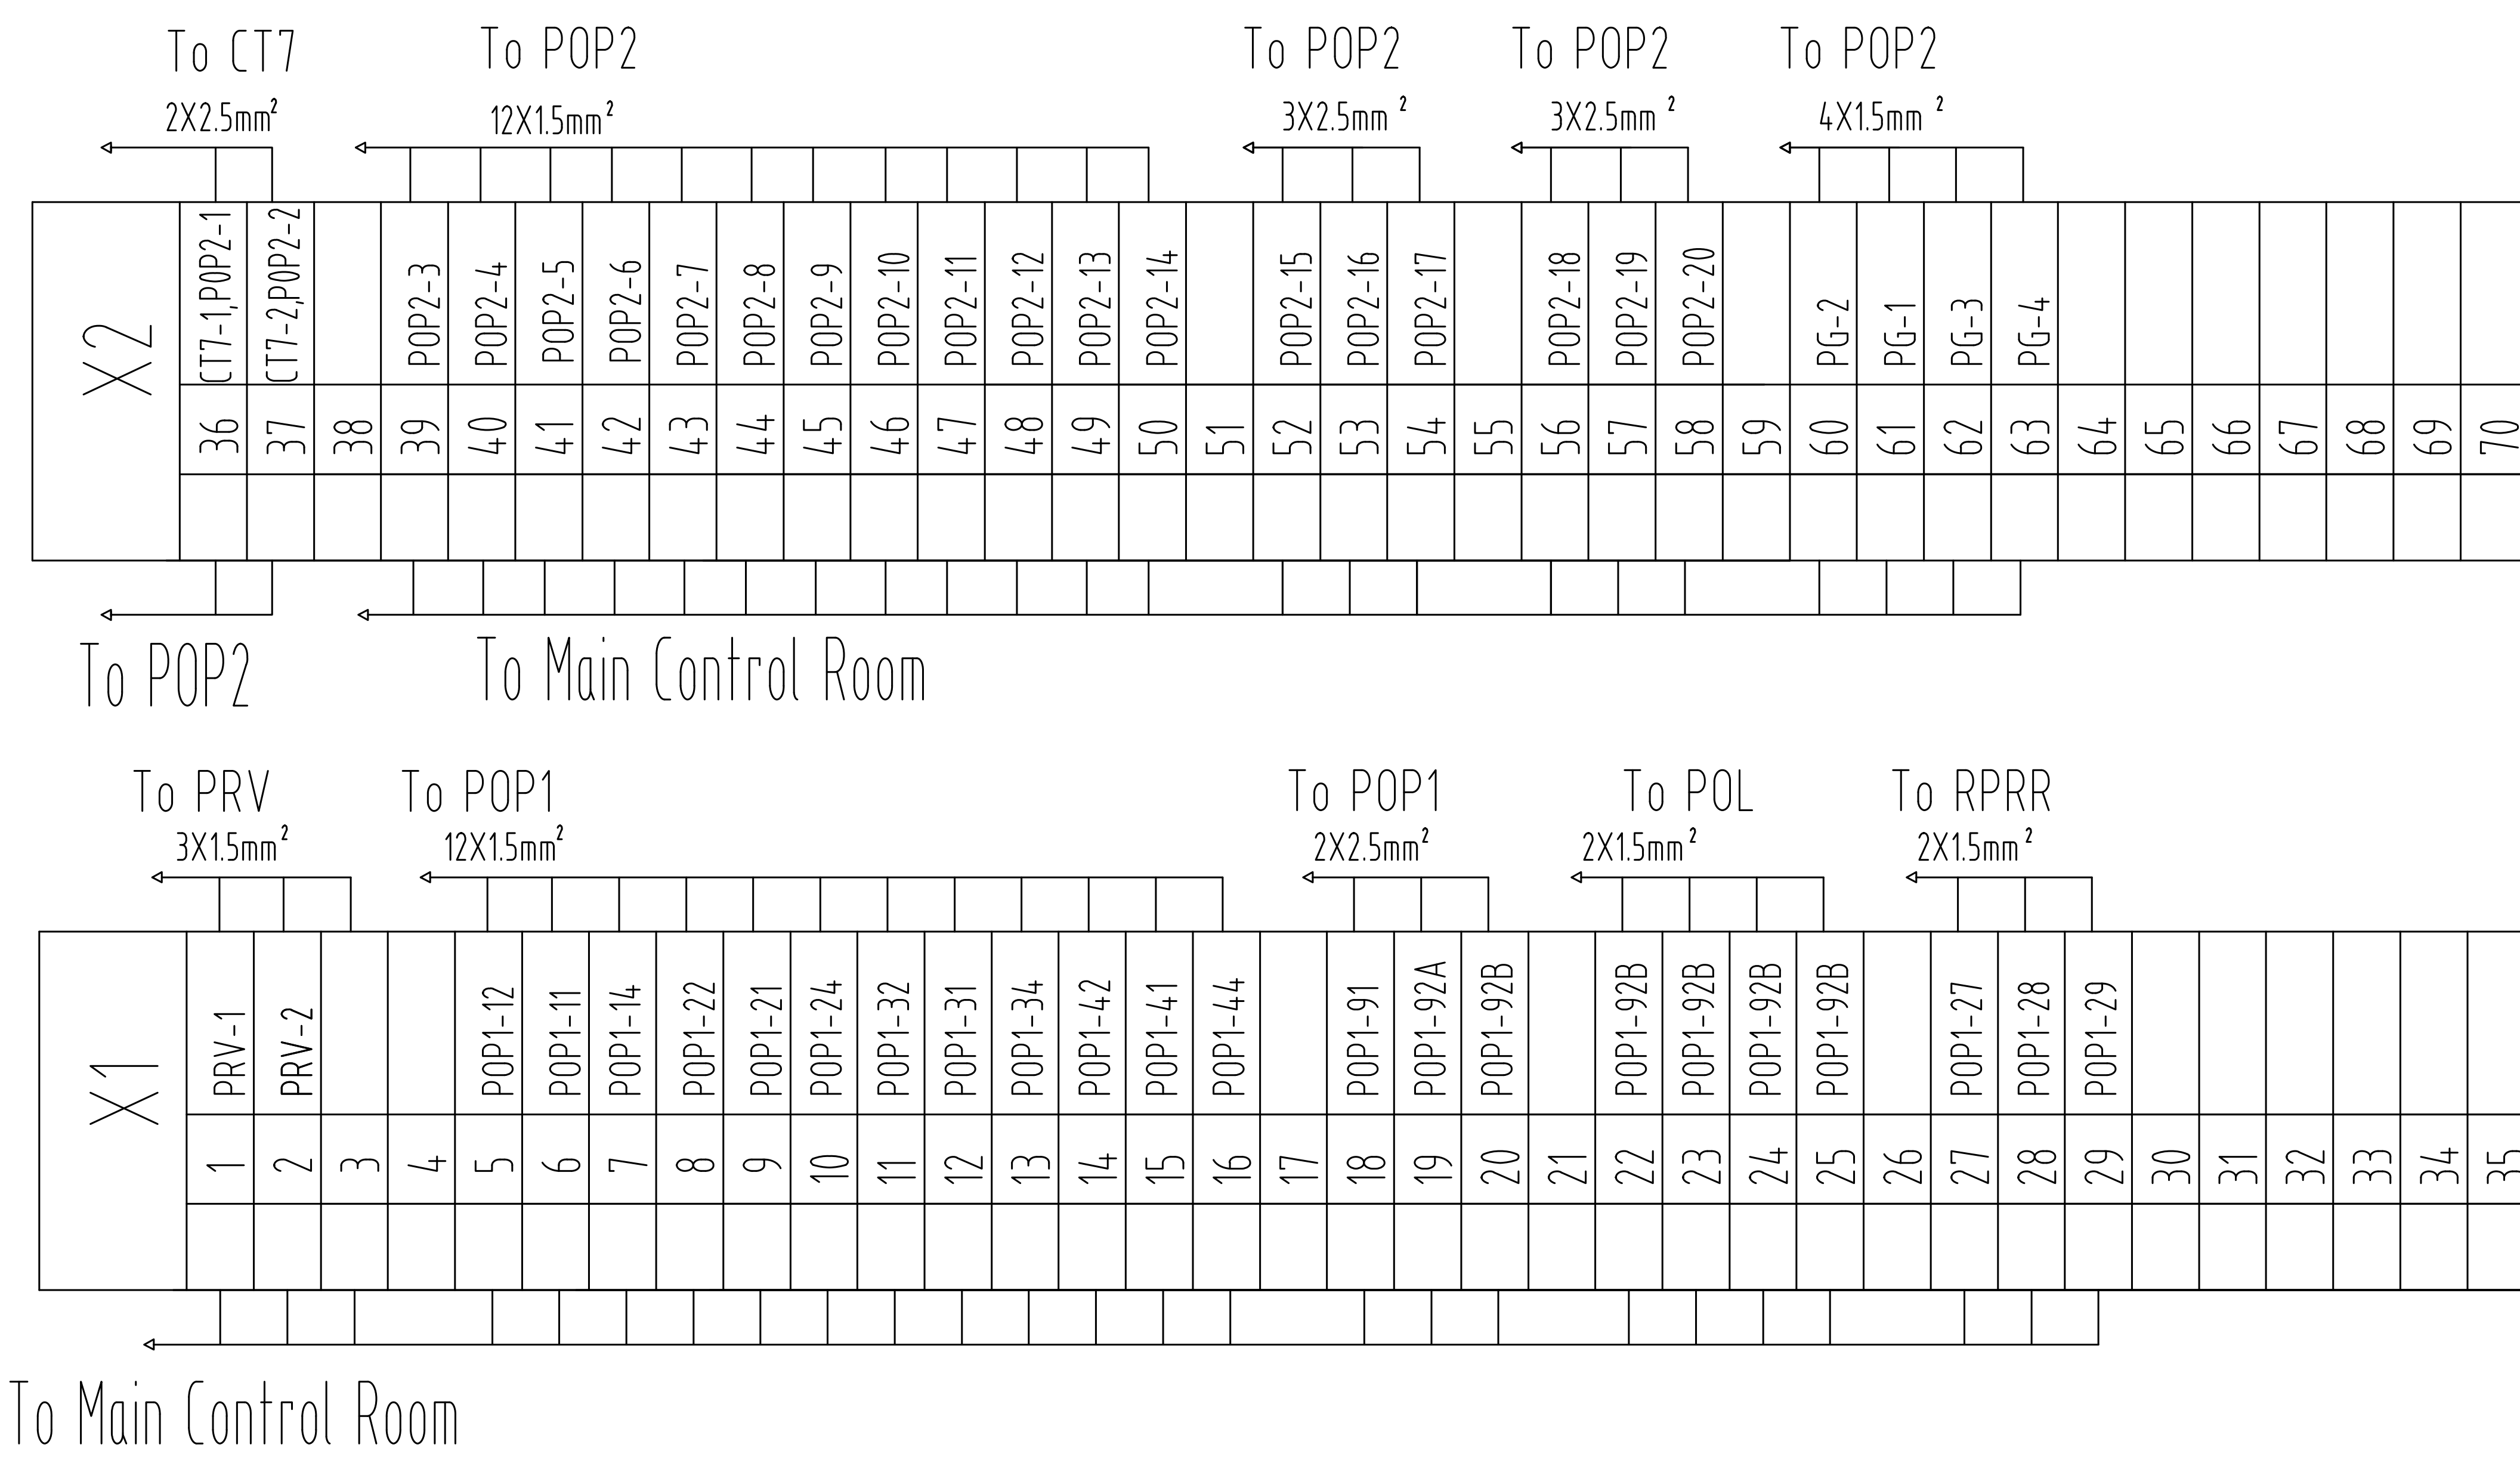

This drawing contains contacts signal and model





|                                |         |         |  |          |                                            |                        |  |          |
|--------------------------------|---------|---------|--|----------|--------------------------------------------|------------------------|--|----------|
| TYPE<br>SF-2000(2660)/14.4/0.6 |         |         |  |          | DWG. NAME<br>Transformer Secondary Diagram |                        |  |          |
| DRAWN                          | CHECKED | CHECKED |  | APPROVED | FIRST ANGLE PROJECTION                     | SCALE                  |  |          |
| Mike W.                        | Iris J. | Ella W. |  | Sam S.   | REF. DWG. NO.                              |                        |  | REV. NO. |
| JZP                            |         |         |  |          | DWG. NO.                                   | SF2000(2660)-231124-02 |  | 1        |

Control instructions:

- 1. The power supply of the fan in this cooler control system adopts AC 120V and 60HZ. A total of two cooling fans. The fan has a rated current of 0.5A and a starting current of 2A. The control power supply adopts AC220V. The control transformer TC is converted through the user's AC120V power supply.
- 2. The main components of the cooler control system, such as circuit breakers, contactors and relays, are made of Schneider brand products. For details, please refer to the component list.
- 3. The cooler control system is designed with three modes: manual control/stop/automatic control. It is implemented by switching 2KK.
  - 1) In the manual control mode, the control system manually starts and stops the fan according to 2KK on the inner door.
  - 2) Automatic control mode: the start and stop of the transformer cooling fan is determined by the PTC100 signal of the thermometer. When the temperature of the thermometer POP1 reaches 55°C, its contacts POP1:21 and POP1:24 close to automatically start the fan. When the temperature of the thermometer drops to 45°C, the contacts POP1:11 and POP1:14 are disconnected, and the fan will be automatically stopped. The thermometer temperature can be set according to the user's needs.

CHANGE



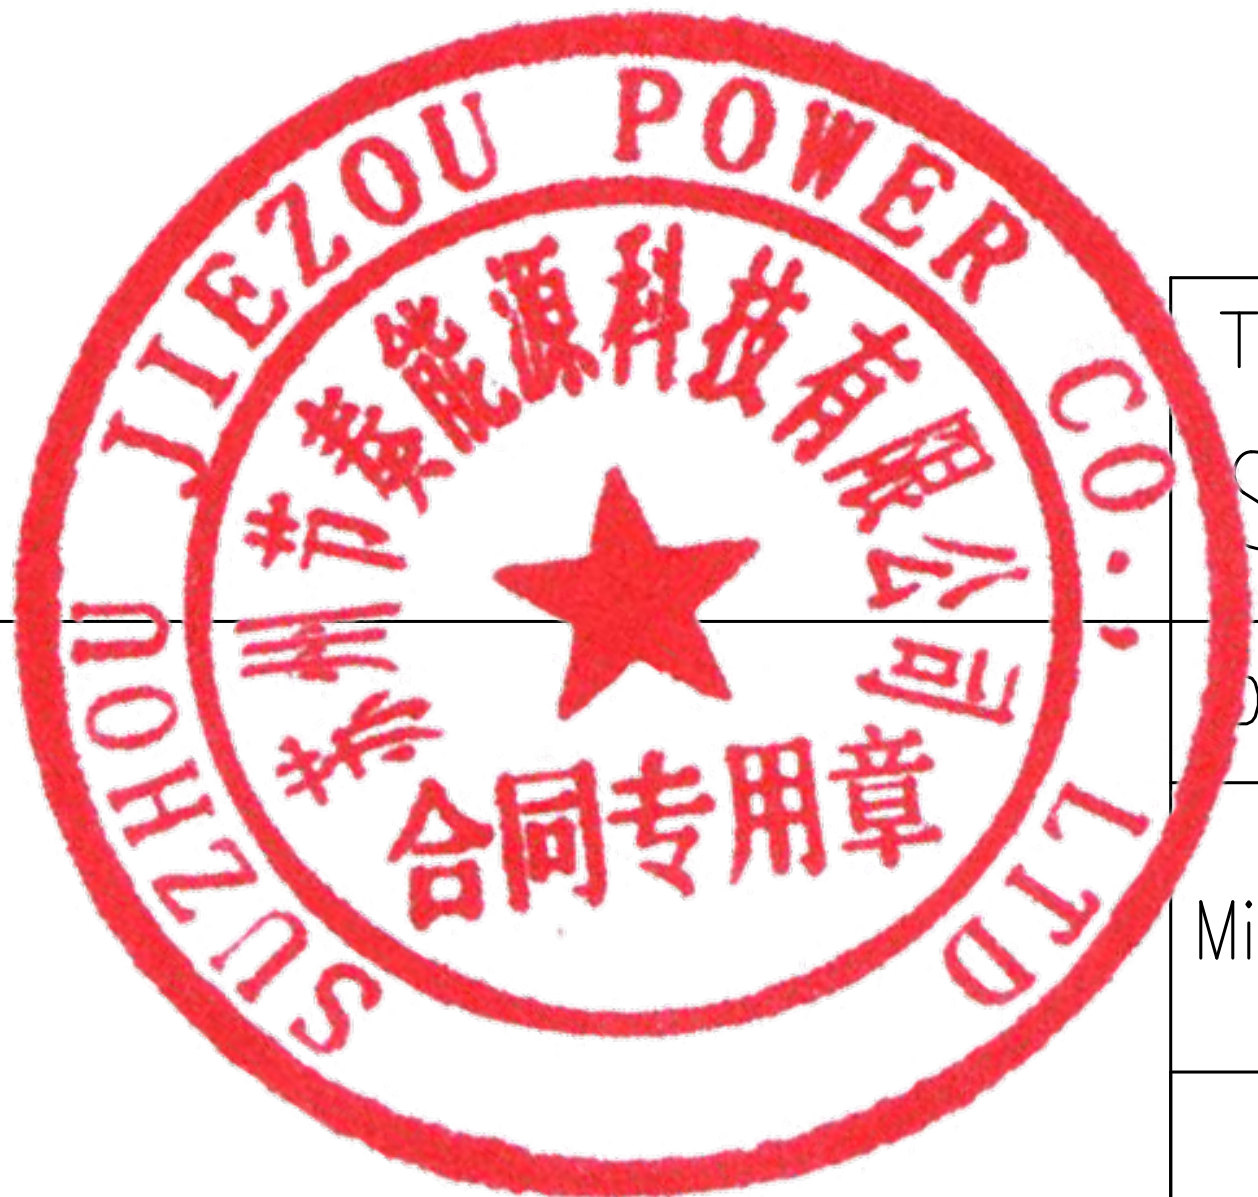

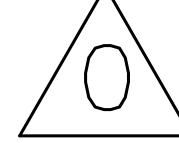
|                                |         |         |  |          |                                                                                       |       |   |                                                                                       |
|--------------------------------|---------|---------|--|----------|---------------------------------------------------------------------------------------|-------|---|---------------------------------------------------------------------------------------|
| TYPE<br>SF-2000(2660)/14.4/0.6 |         |         |  |          | DWG. NAME<br>SF2 air-cooled control box                                               |       |   |                                                                                       |
| DRAWN                          | CHECKED | CHECKED |  | APPROVED | FIRST ANGLE<br>PROJECTION                                                             | SCALE | 1 |                                                                                       |
| Mike W.                        | Iris J. | Ella W  |  | Sam S.   |  |       |   | REV.<br>NO.                                                                           |
| SF2000(2660)–231124–02         |         |         |  |          |                                                                                       |       |   |  |

Control Panel

- Instructions for requirements:(Component with UL list)
- 1. The component installation board is 25mm from the left and right sides of the cabinet, 80mm from the top and 150mm from the bottom.
  - 2. The shell is 2mm thick stainless steel, and the component mounting plate is 2mm thick galvanized plate.
  - 3. The width of the installation board of the left and right side components in the cabinet is 25mm.
  - 4. The fixed rod of the cabinet top ring is made of stainless steel and is seamlessly welded between the cabinet.
  - 5. The front door and cabinet need to have an M6\*20 stainless steel rod with a grounding wire.
  - 6. The stainless steel grounding device is seamlessly welded between the cabinet.

Layout of the inner door panel

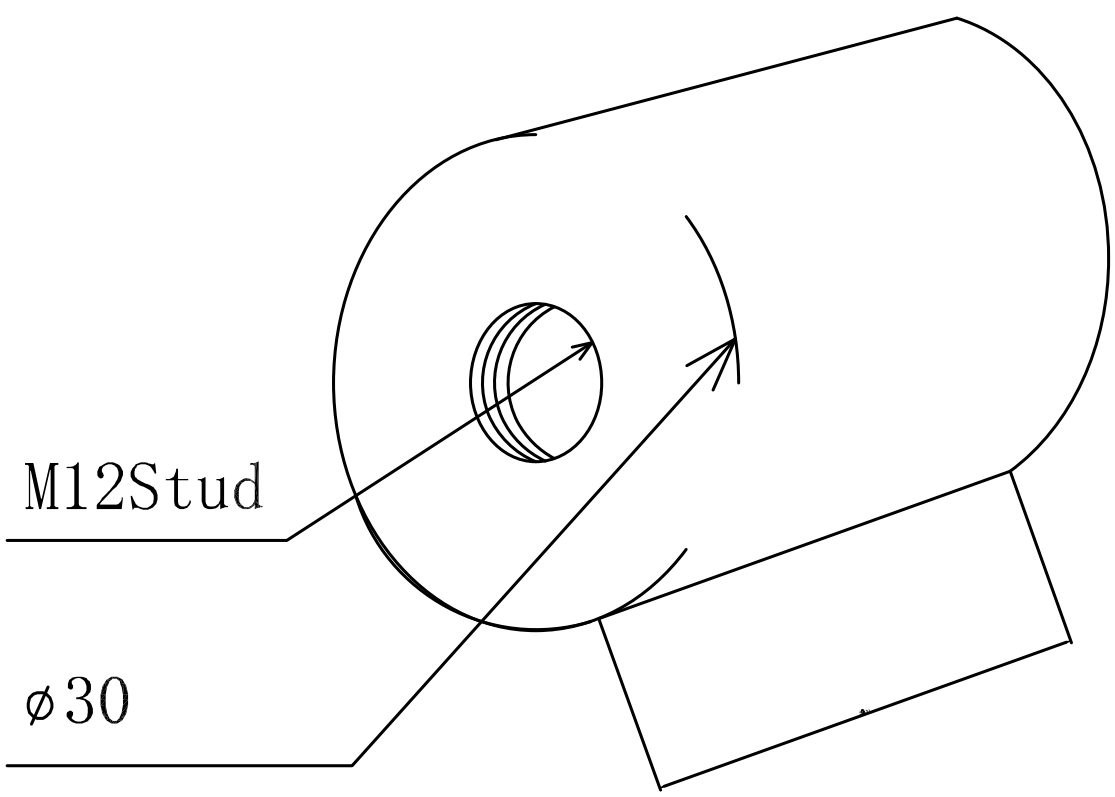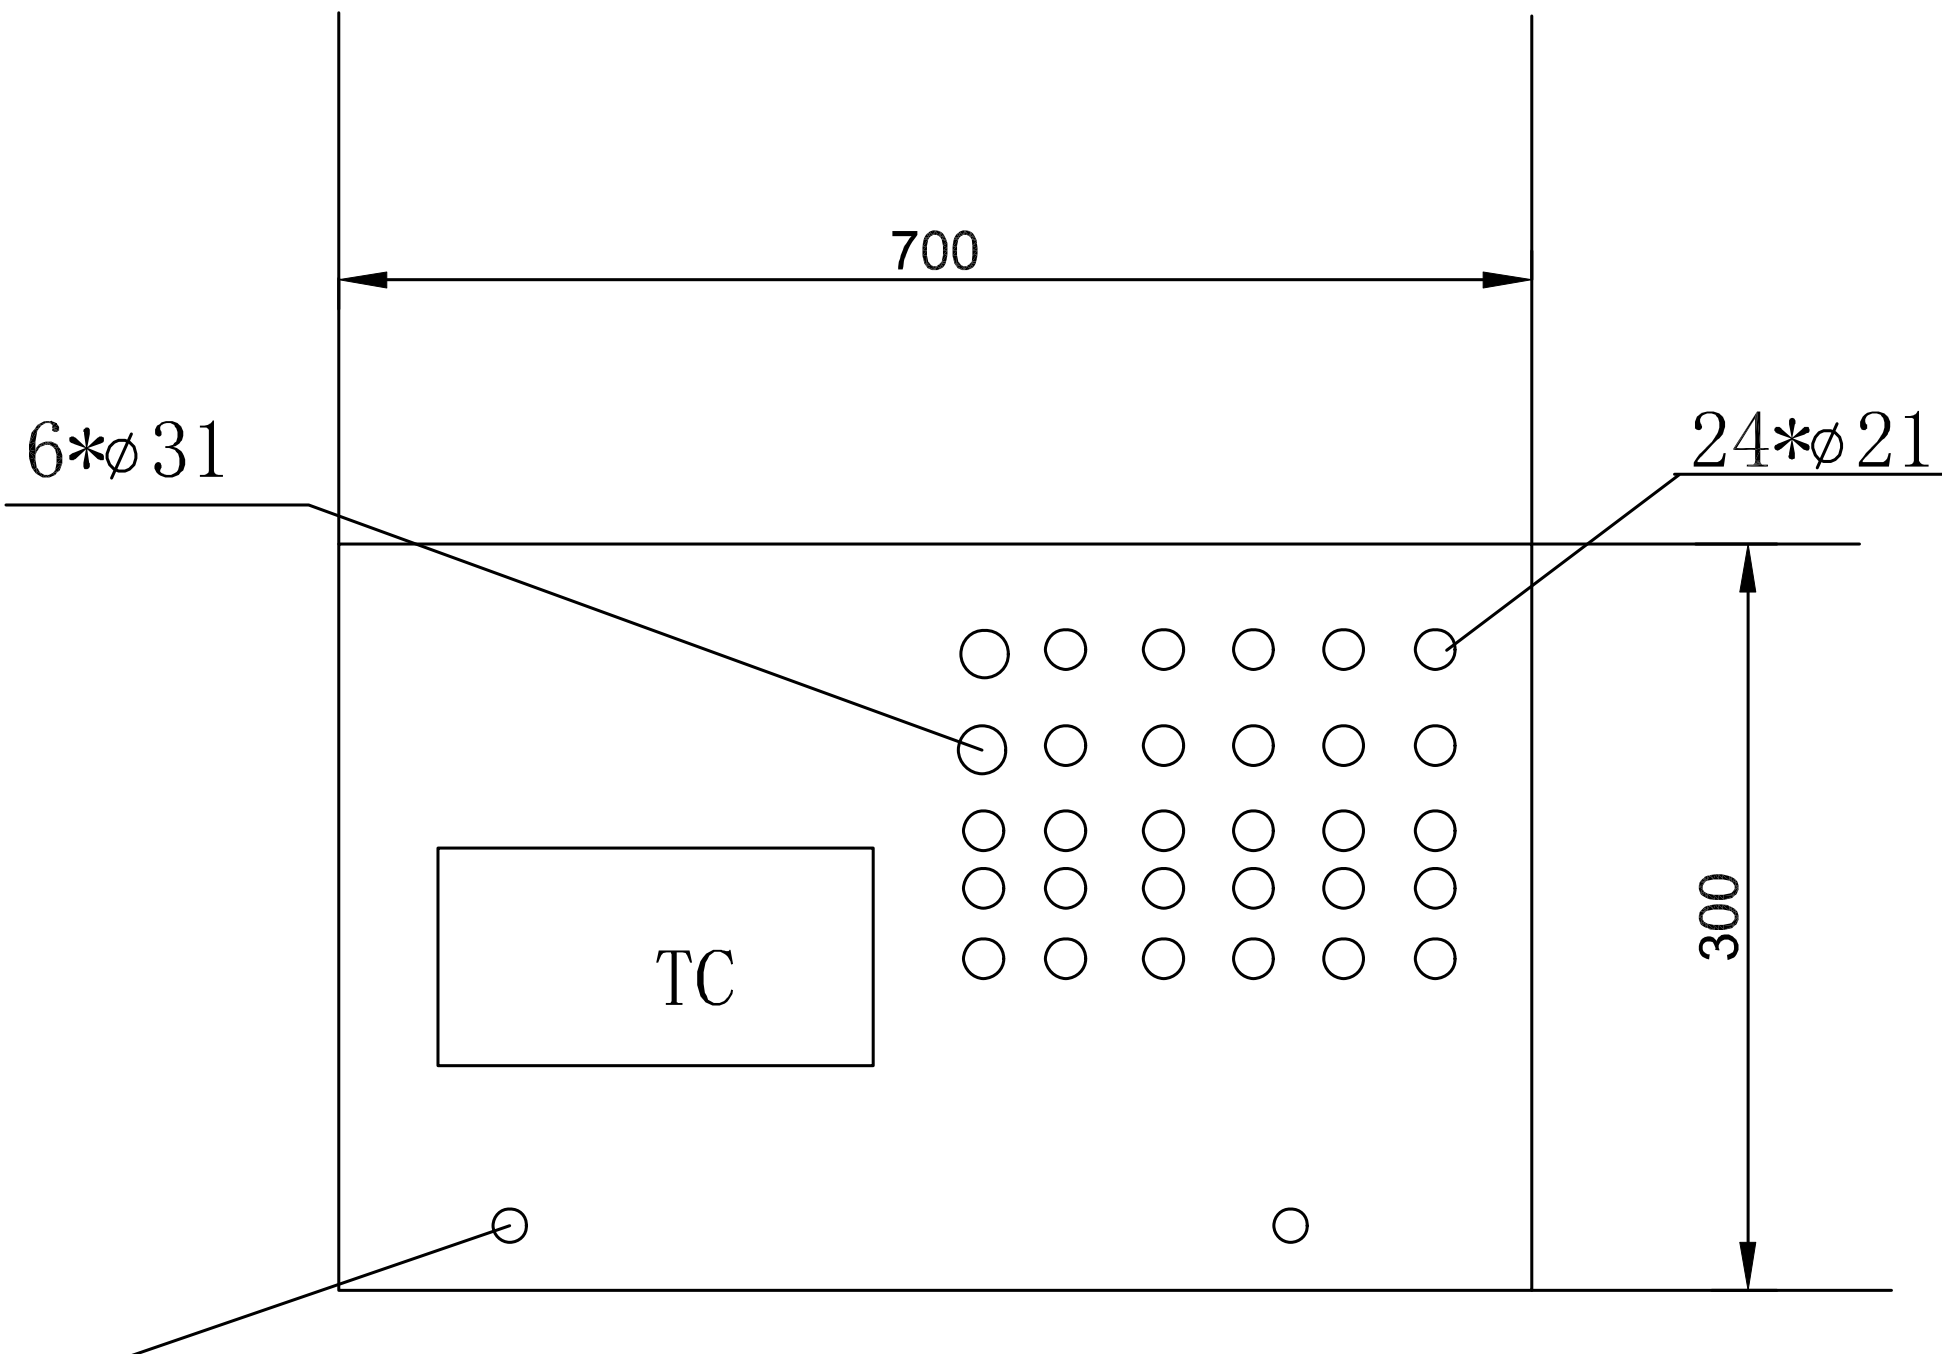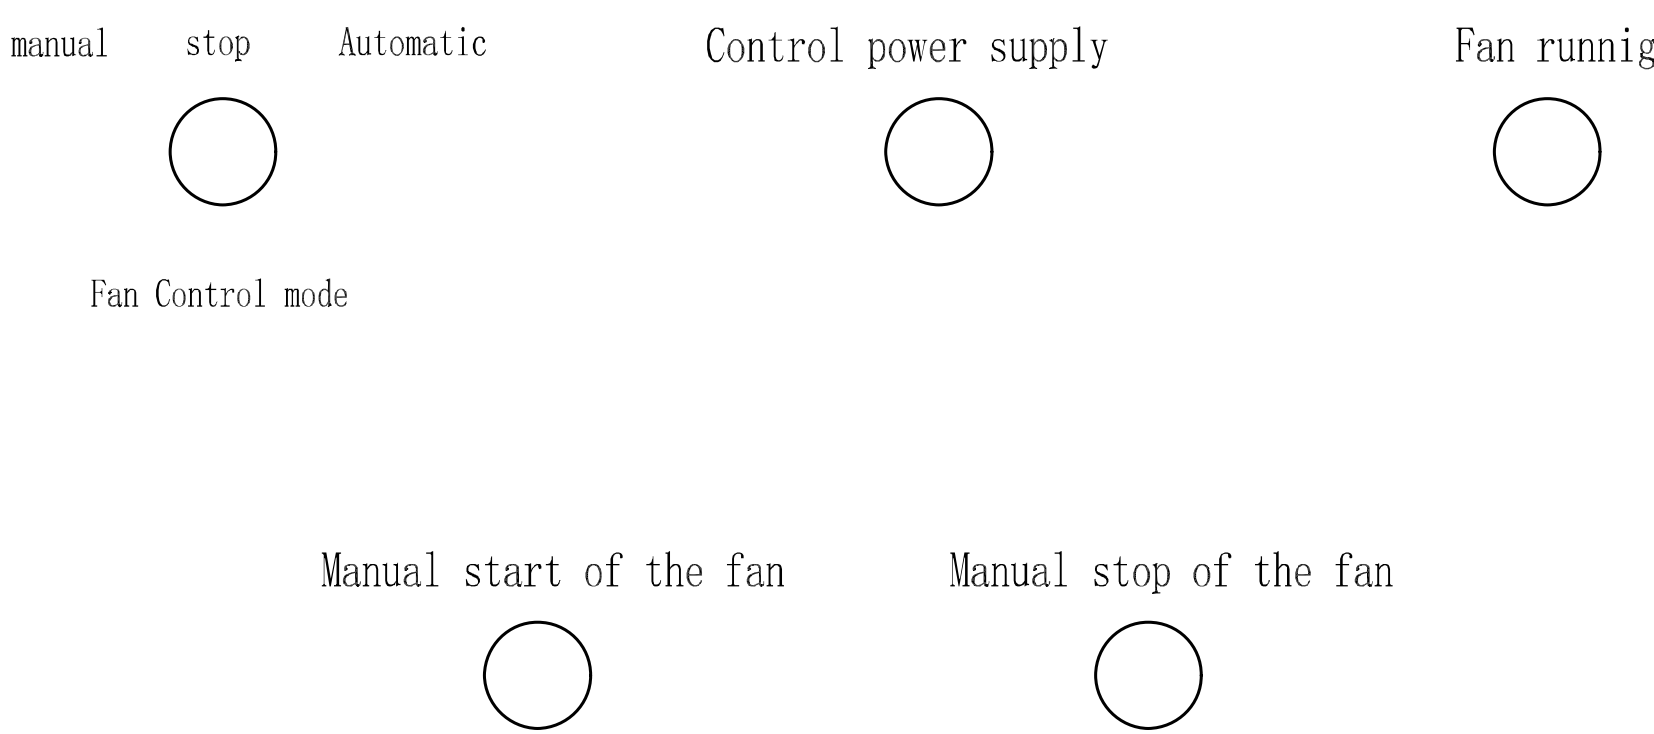

Side grounding device



|                                |         |         |  |          |                                         |       |   |  |              |
|--------------------------------|---------|---------|--|----------|-----------------------------------------|-------|---|--|--------------|
| TYPE<br>SF-2000(2660)/14.4/0.6 |         |         |  |          | DWG. NAME<br>SF2 air-cooled control box |       |   |  |              |
| DRAWN                          | CHECKED | CHECKED |  | APPROVED | FIRST ANGLE<br>PROJECTION               | SCALE | 1 |  |              |
| Mike W.                        | Iris J. | Ella W  |  | Sam S.   | <div>JZP<br/>SINCE 1989 FROM USA</div>  |       |   |  | REV.<br>NO.  |
| SF2000(2660)–231124–02         |         |         |  |          |                                         |       |   |  | <div>0</div> |




CHANGE





Power supply, fan signal

ALL BLACK LINE AWG16

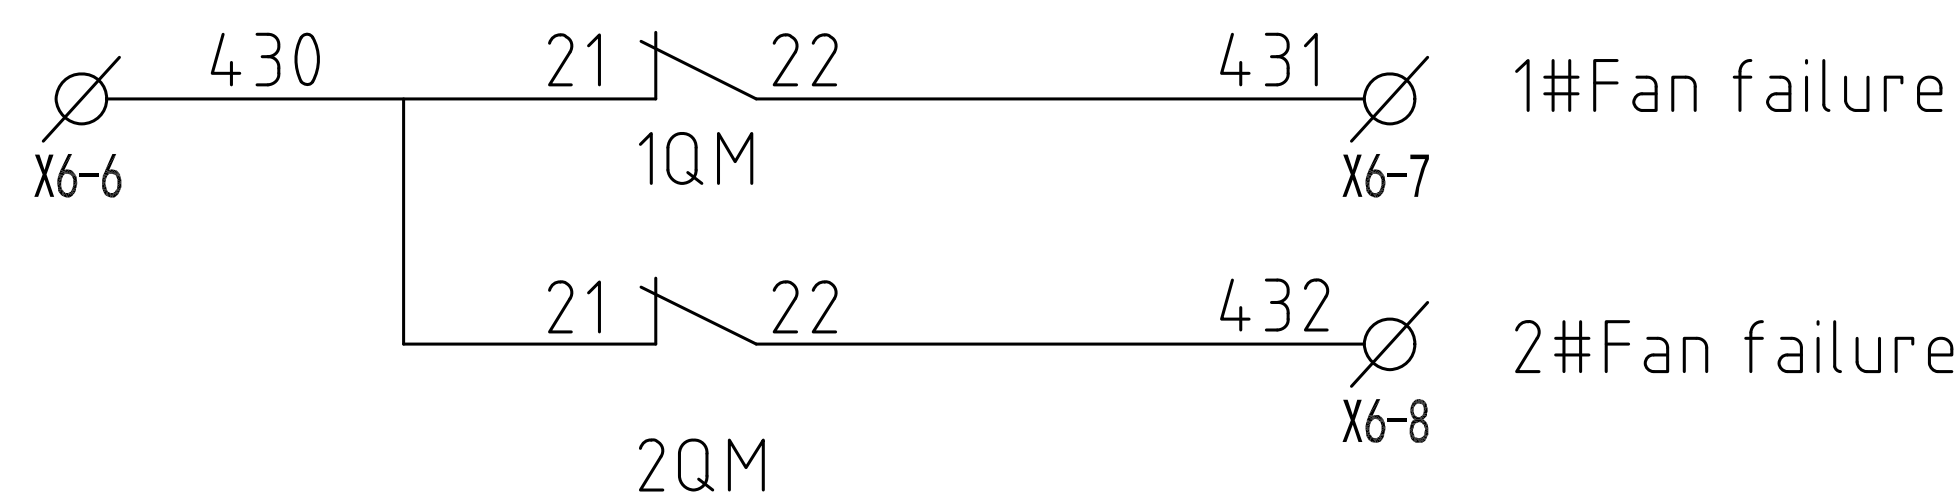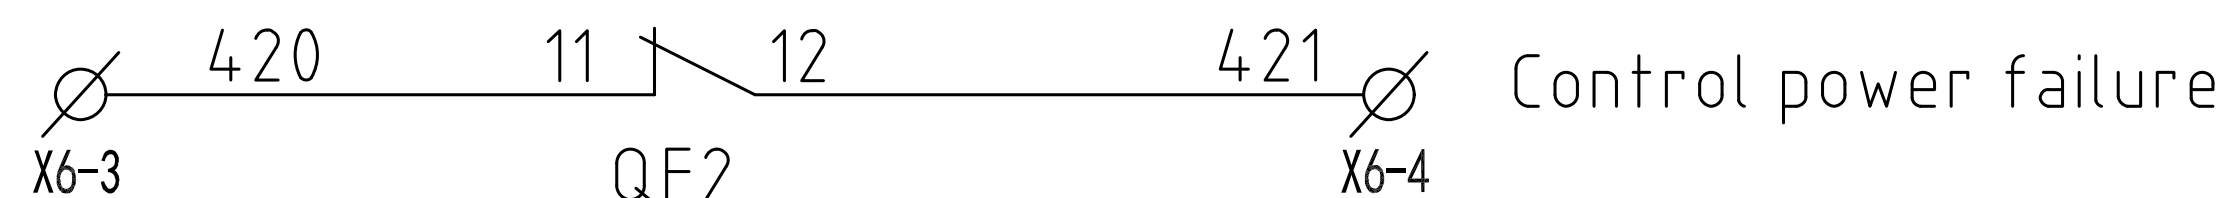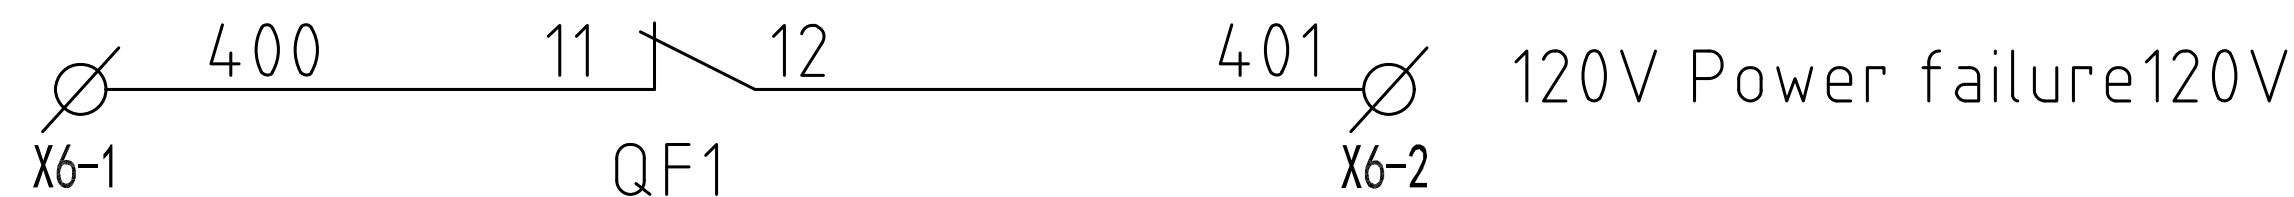

|                                |         |         |  |          |                                               |       |   |  |  |          |
|--------------------------------|---------|---------|--|----------|-----------------------------------------------|-------|---|--|--|----------|
| TYPE<br>SF-2000(2660)/14.4/0.6 |         |         |  |          | DWG. NAME<br>SF2 air-cooled control box       |       |   |  |  |          |
| DRAWN                          | CHECKED | CHECKED |  | APPROVED | FIRST ANGLE PROJECTION                        | SCALE | 1 |  |  |          |
| Mike W.                        | Iris J. | Ella W  |  | Sam S.   | <div>JZP</div> <div>SINCE 1989 FROM USA</div> |       |   |  |  | REV. NO. |
| SF2000(2660)–231124–02         |         |         |  |          |                                               |       |   |  |  |          |

CHANGE



components are UL list

| No. | Component code | Component name                                       | Model                  | Qty | Brand                |
|-----|----------------|------------------------------------------------------|------------------------|-----|----------------------|
| 1   | QF1            | AC air circuit breaker                               | OSMC65H2D50            | 1   | Schneider            |
| 2   | QF2            | AC air circuit breaker                               | OSMC65H2D6             | 1   | Schneider            |
| 3   | SD             | Auxiliary contact                                    | A9A26924               | 2   | Schneider            |
| 4   | KA2            | Intermediate relay                                   | RXM4AB2F7/AC220V       | 1   | Schneider            |
| 5   | 1QM 2QM        | Motor protection circuit breaker                     | GV2MP14                | 2   | Schneider            |
| 6   | BS             | Humidity controller (Including humidity sensor)      | 3118.000 AC120V        | 1   | WEITU                |
| 7   | BC             | Temperature controller (including temperature probe) | 3110.000 AC120V        | 1   | WEITU                |
| 8   | 1KM            | AC contactor                                         | LC1D50AM7 /AC220V 60HZ | 1   | Schneider            |
| 9   | R              | Condensate load heater                               | DJR-S-50W              | 1   | MENGYOU              |
| 10  | SA             | State transition switch (manual stop automatic)      | XB4BD33                | 1   | Schneider            |
| 11  | CZ             | RECEPTACLE                                           | GFCI 120V              | 1   | ZHONGTONG            |
| 12  | CK             | Respiratory net mask                                 | FU9801 B P2+Rain cover | 1   | KAKU                 |
| 13  | F              | Fan                                                  | Series 80 AC120 V      | 1   | SUNTRONIX            |
| 14  | X1             | Terminal                                             | UK5N                   | 35  | PHOENIX              |
| 15  | X3             | Terminal                                             | UK10N                  | 3   | PHOENIX              |
| 16  | X4             | Terminal                                             | UK5N                   | 12  | PHOENIX              |
| 17  | X5             | Terminal                                             | UK2.5B                 | 19  | PHOENIX              |
| 18  | R1             | Fuse                                                 | FNQ-R-6                | 1   | Bussmann             |
| 19  | TC             | control power transformer                            | DG-800VA               | 1   | IN:AC120V OUT:AC220V |
| 18  |                |                                                      |                        |     |                      |
| 19  |                |                                                      |                        |     |                      |
| 20  |                |                                                      |                        |     |                      |
| 21  |                |                                                      |                        |     |                      |
| 22  |                |                                                      |                        |     |                      |



|                                |         |         |  |          |                                         |       |   |  |              |
|--------------------------------|---------|---------|--|----------|-----------------------------------------|-------|---|--|--------------|
| TYPE<br>SF-2000(2660)/14.4/0.6 |         |         |  |          | DWG. NAME<br>SF2 air-cooled control box |       |   |  |              |
| DRAWN                          | CHECKED | CHECKED |  | APPROVED | FIRST ANGLE PROJECTION                  | SCALE | 1 |  |              |
| Mike W.                        | Iris J. | Ella W  |  | Sam S.   | <div>JZP<br/>SINCE 1989 FROM USA</div>  |       |   |  | REV. NO.     |
| SF2000(2660)–231124–02         |         |         |  |          |                                         |       |   |  | <div>0</div> |

CHANGE